


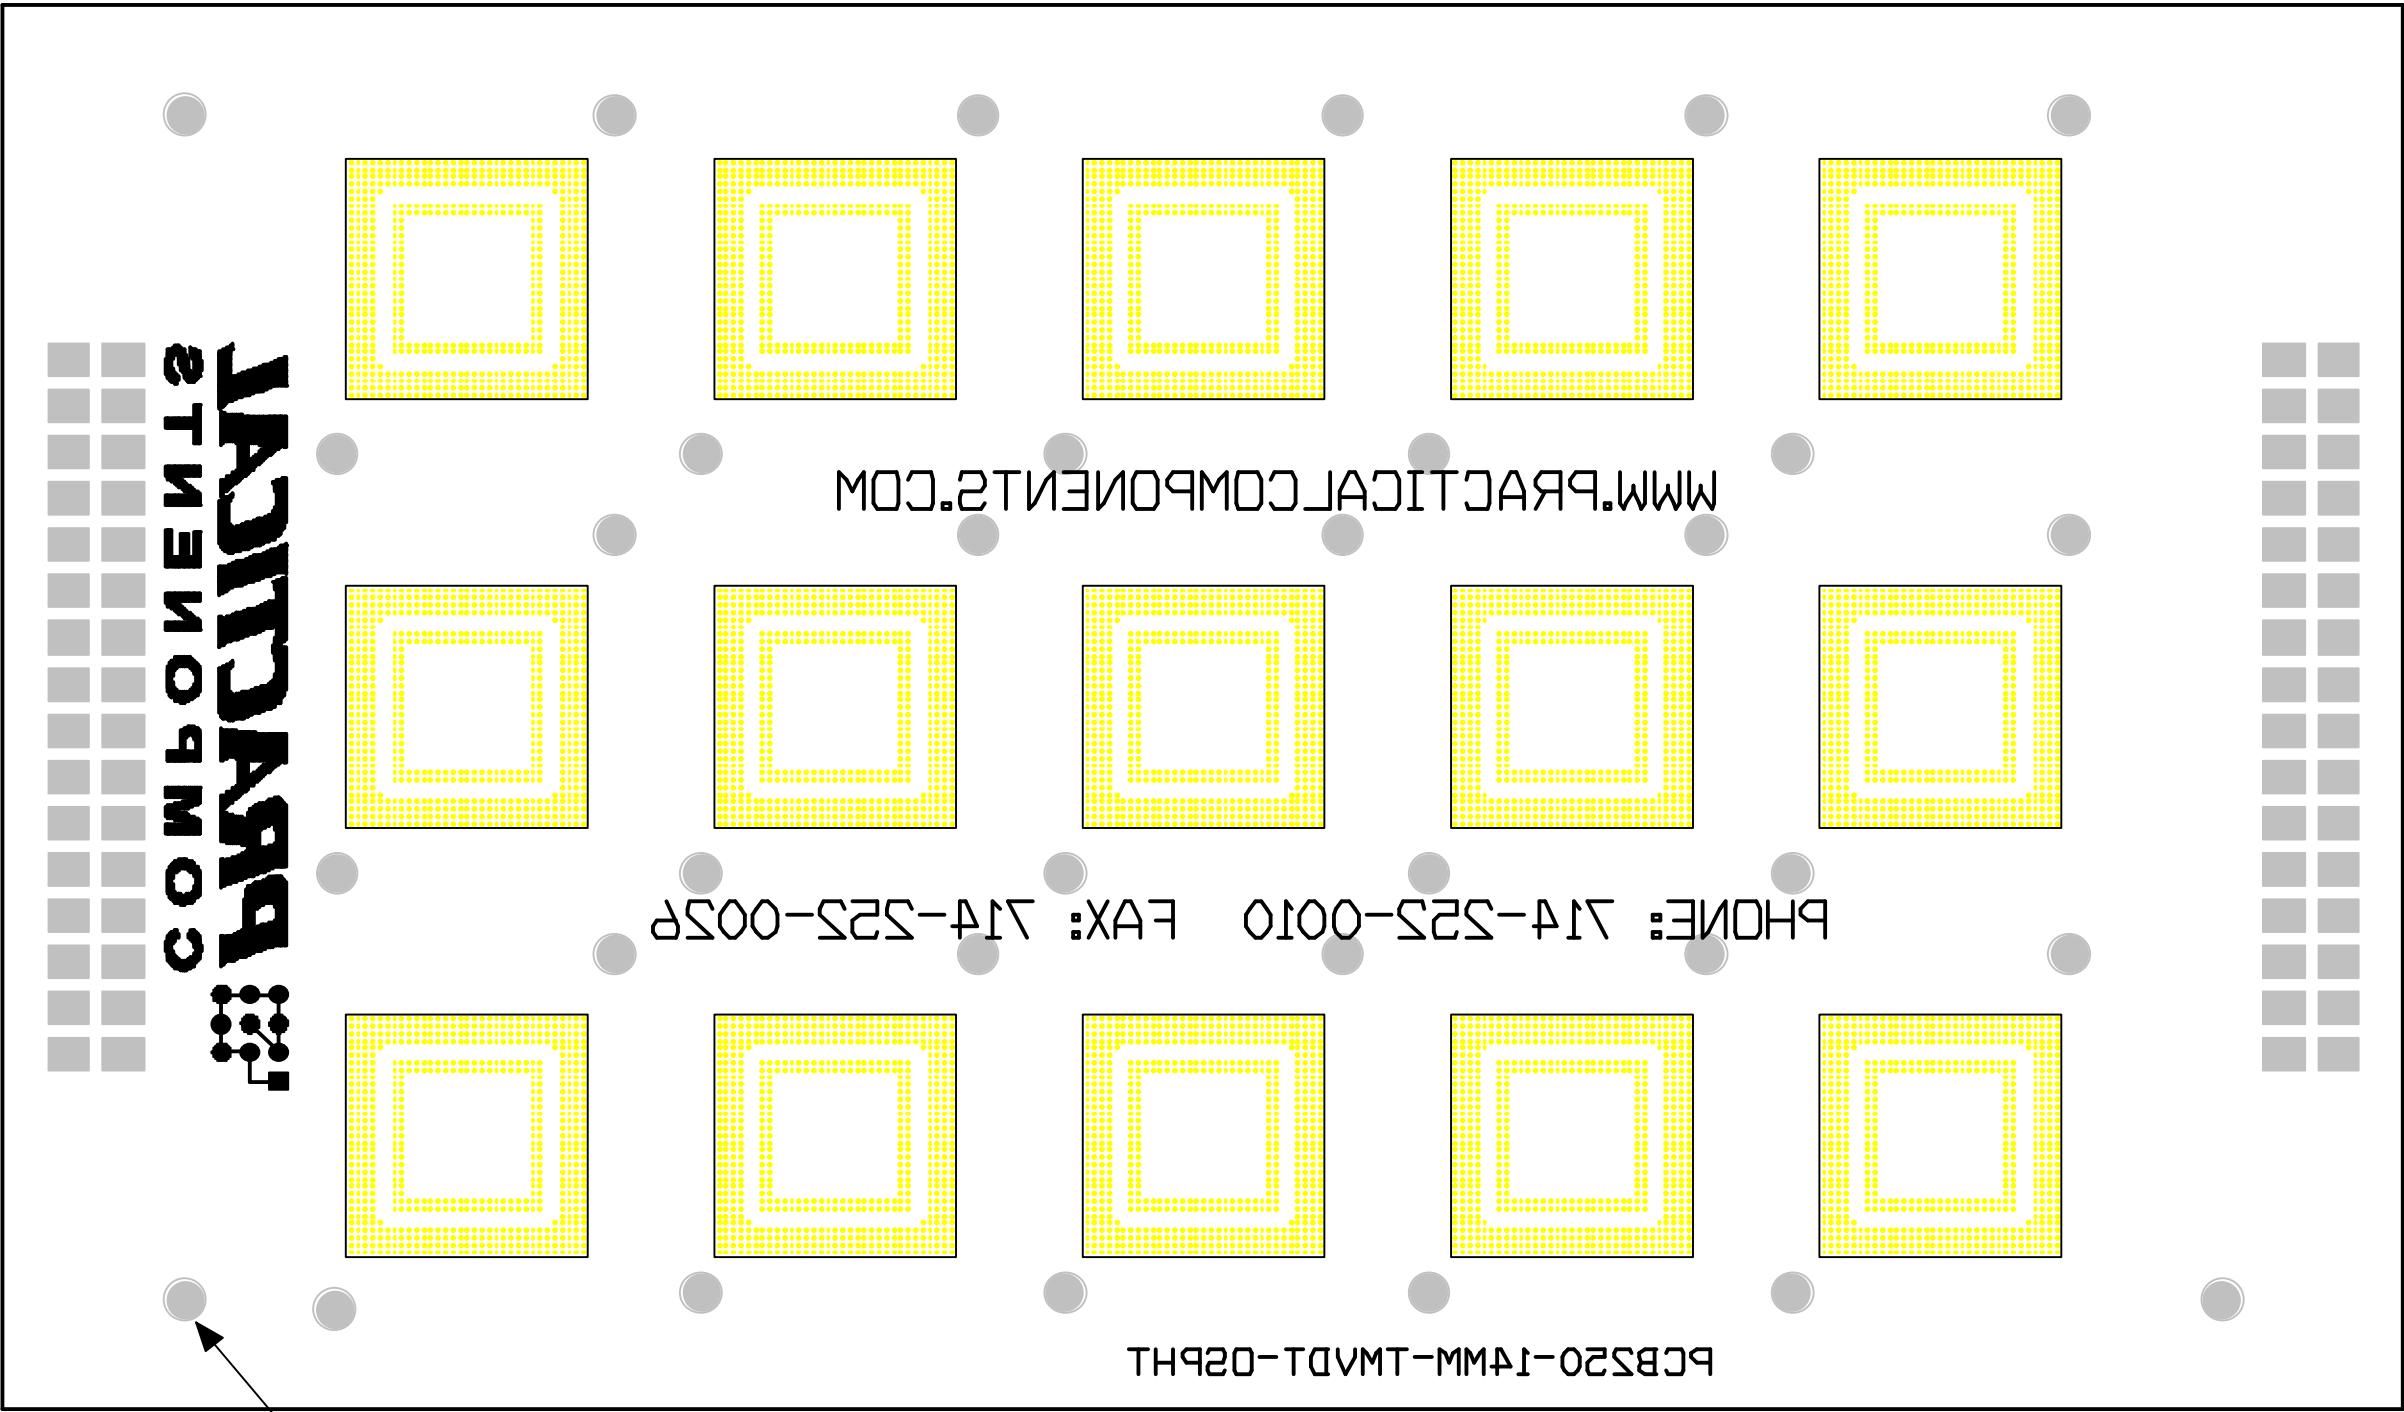

Run Direction

Run Direction

Origin Point


THIS IS A STATIC SENSITIVE ASSEMBLY.
TAKE ALL NECESSARY PRECAUTIONS DURING HANDLING.

Customer:	Practical Components
Assembly Number:	PCB 250-14mm TMV
Assembly Name:	
Assembly Revision	2011-03-04
Description of Change	
Last Modified:	3/8/2011
Modified by:	bmiklosey



Process Point:
Bot - SMT

	Practical Part Number	Order #	Qty
	A-TMVPSvfBGA620-.4-14mm-DC-125	31558	15

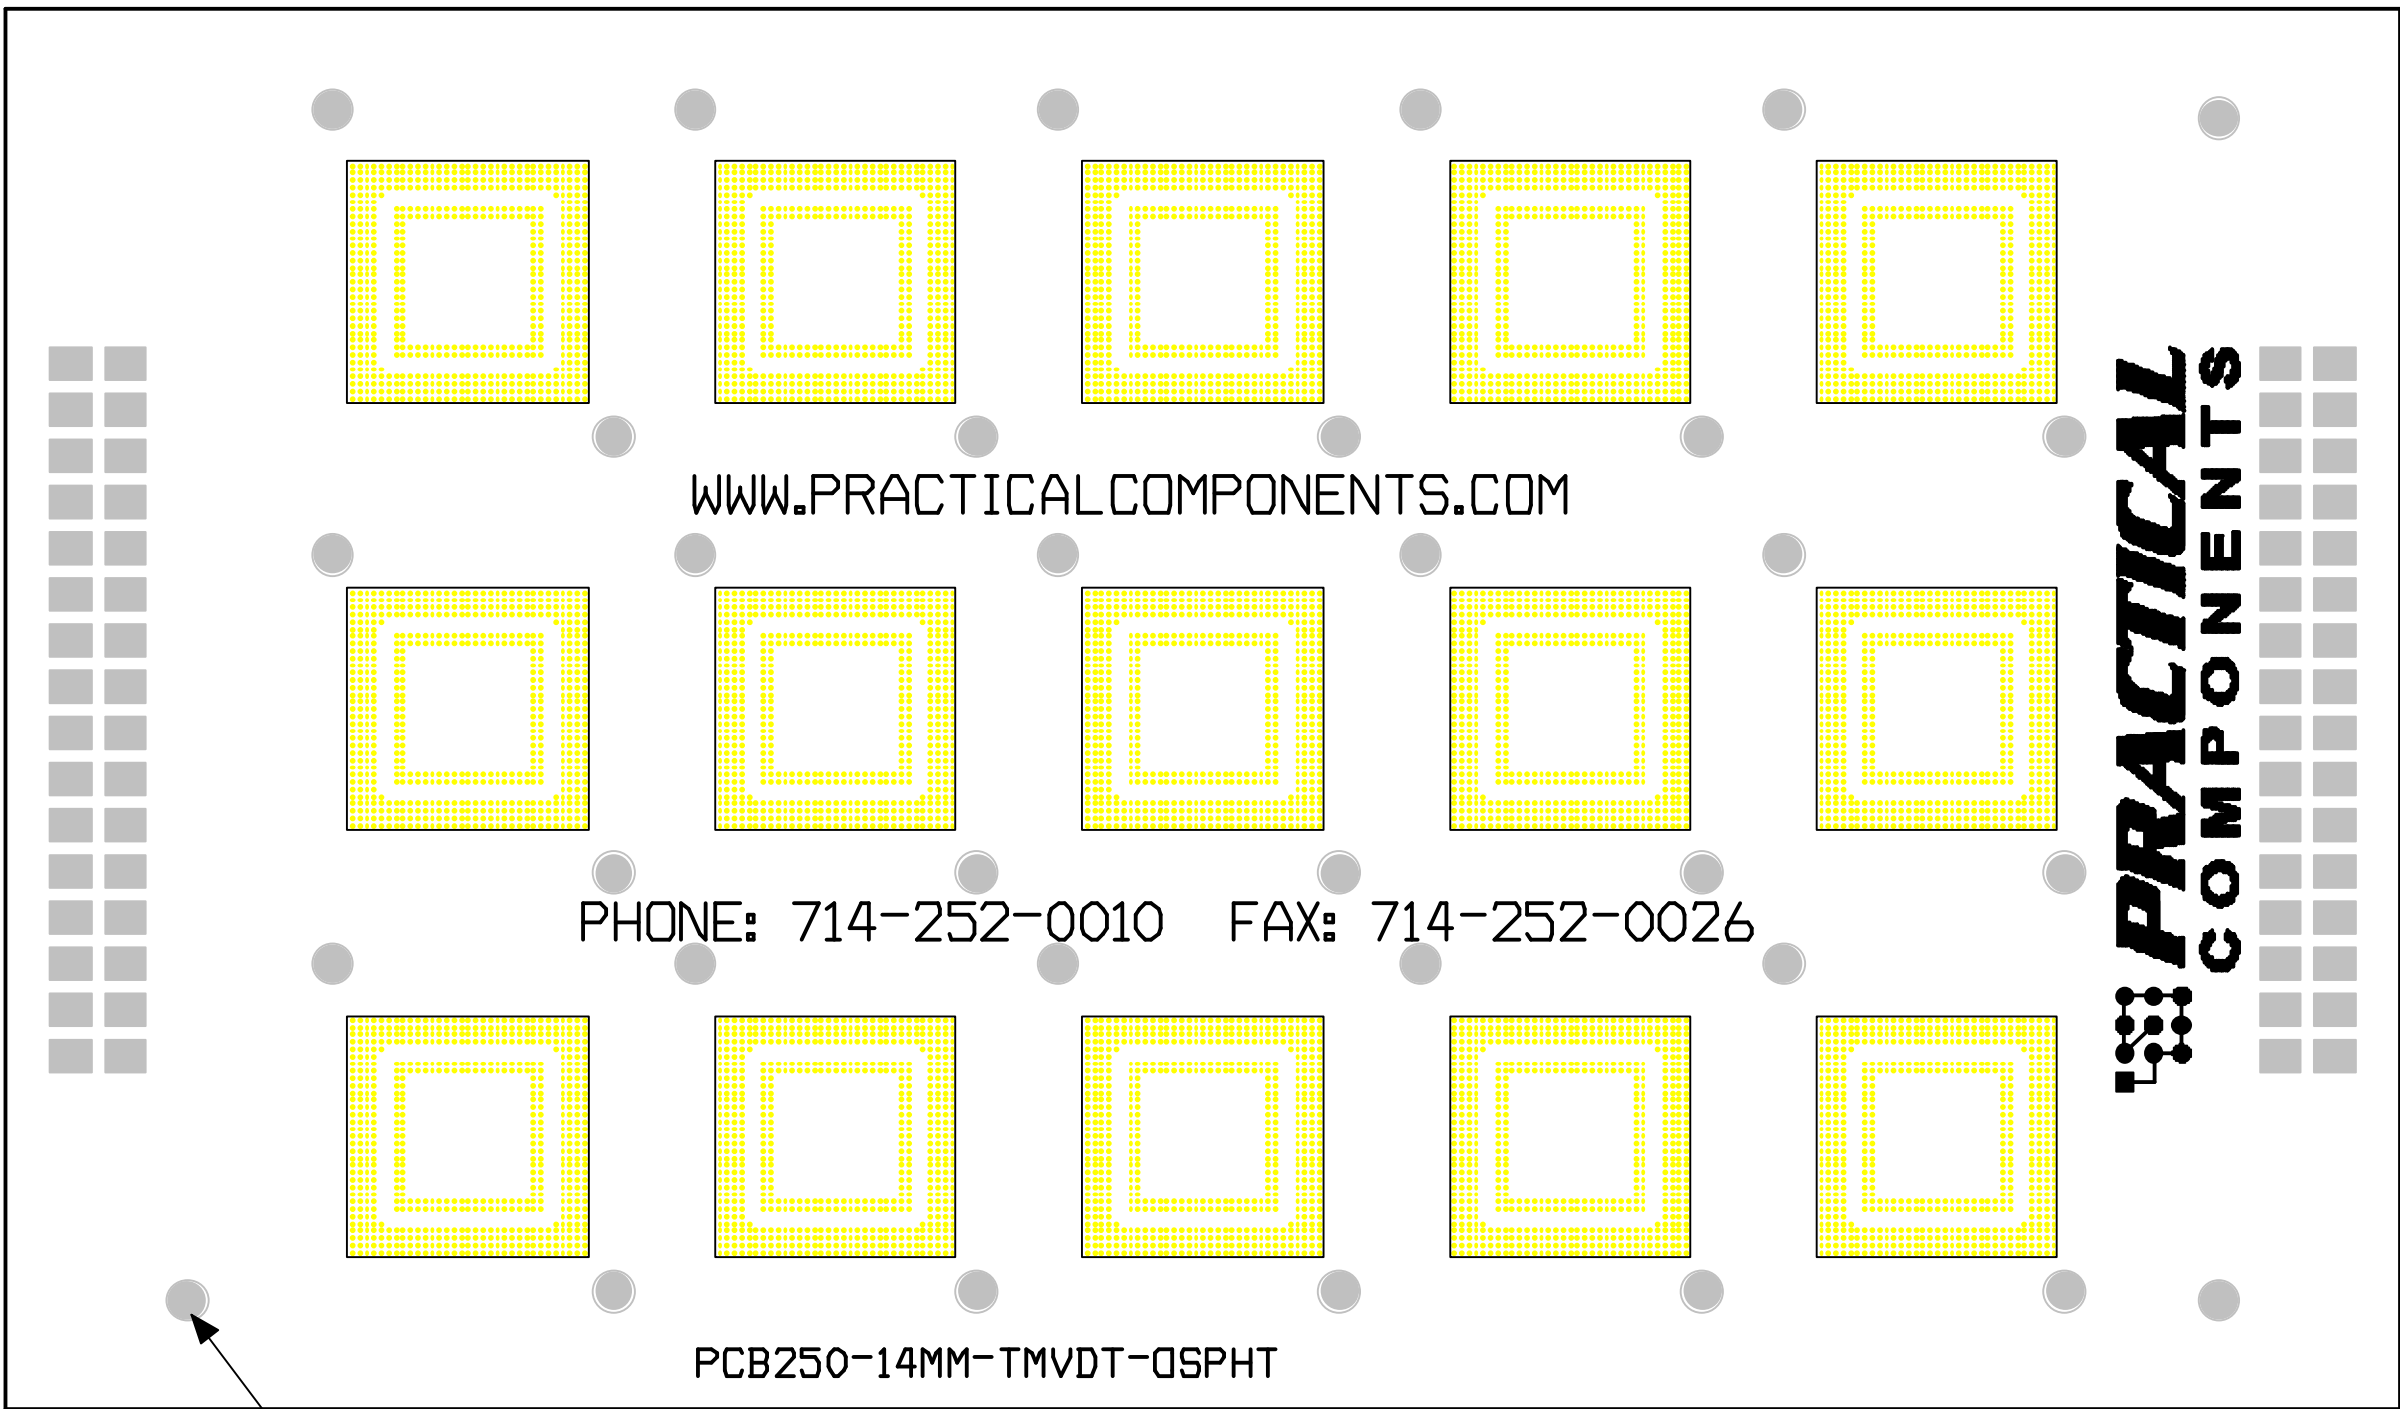

Origin Point

THIS IS A STATIC SENSITIVE ASSEMBLY.
TAKE ALL NECESSARY PRECAUTIONS DURING HANDLING.



Customer:	Practical Components
Assembly Number:	PCB 250-14mm TMV
Assembly Name:	
Assembly Revision	2011-03-04
Description of Change	
Last Modified:	3/8/2011
Modified by:	bmiklosey



Process Point:
Top - SMT

	Practical Part Number	Order #	Qty
	A-TMVPSvfBGA620-.4-14mm-DC-125	31558	15

	Practical Part Number	Order #	Qty
	A-TMVPSvfBGA620-.4-14mm-DC-125	31558	30

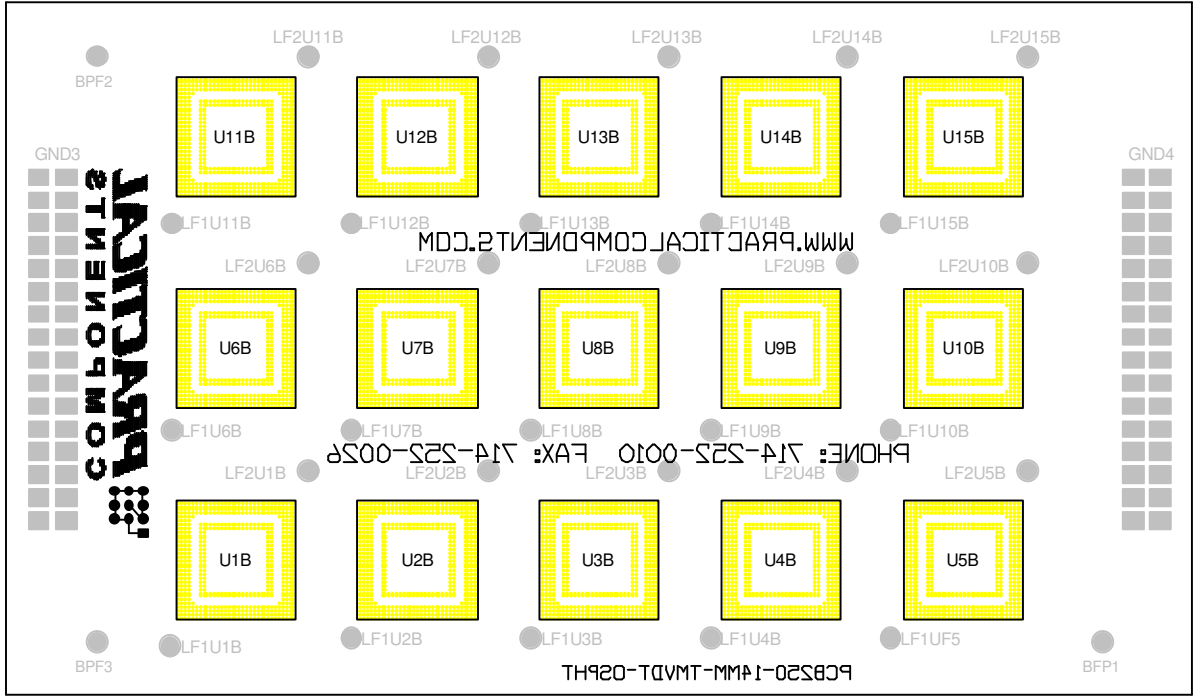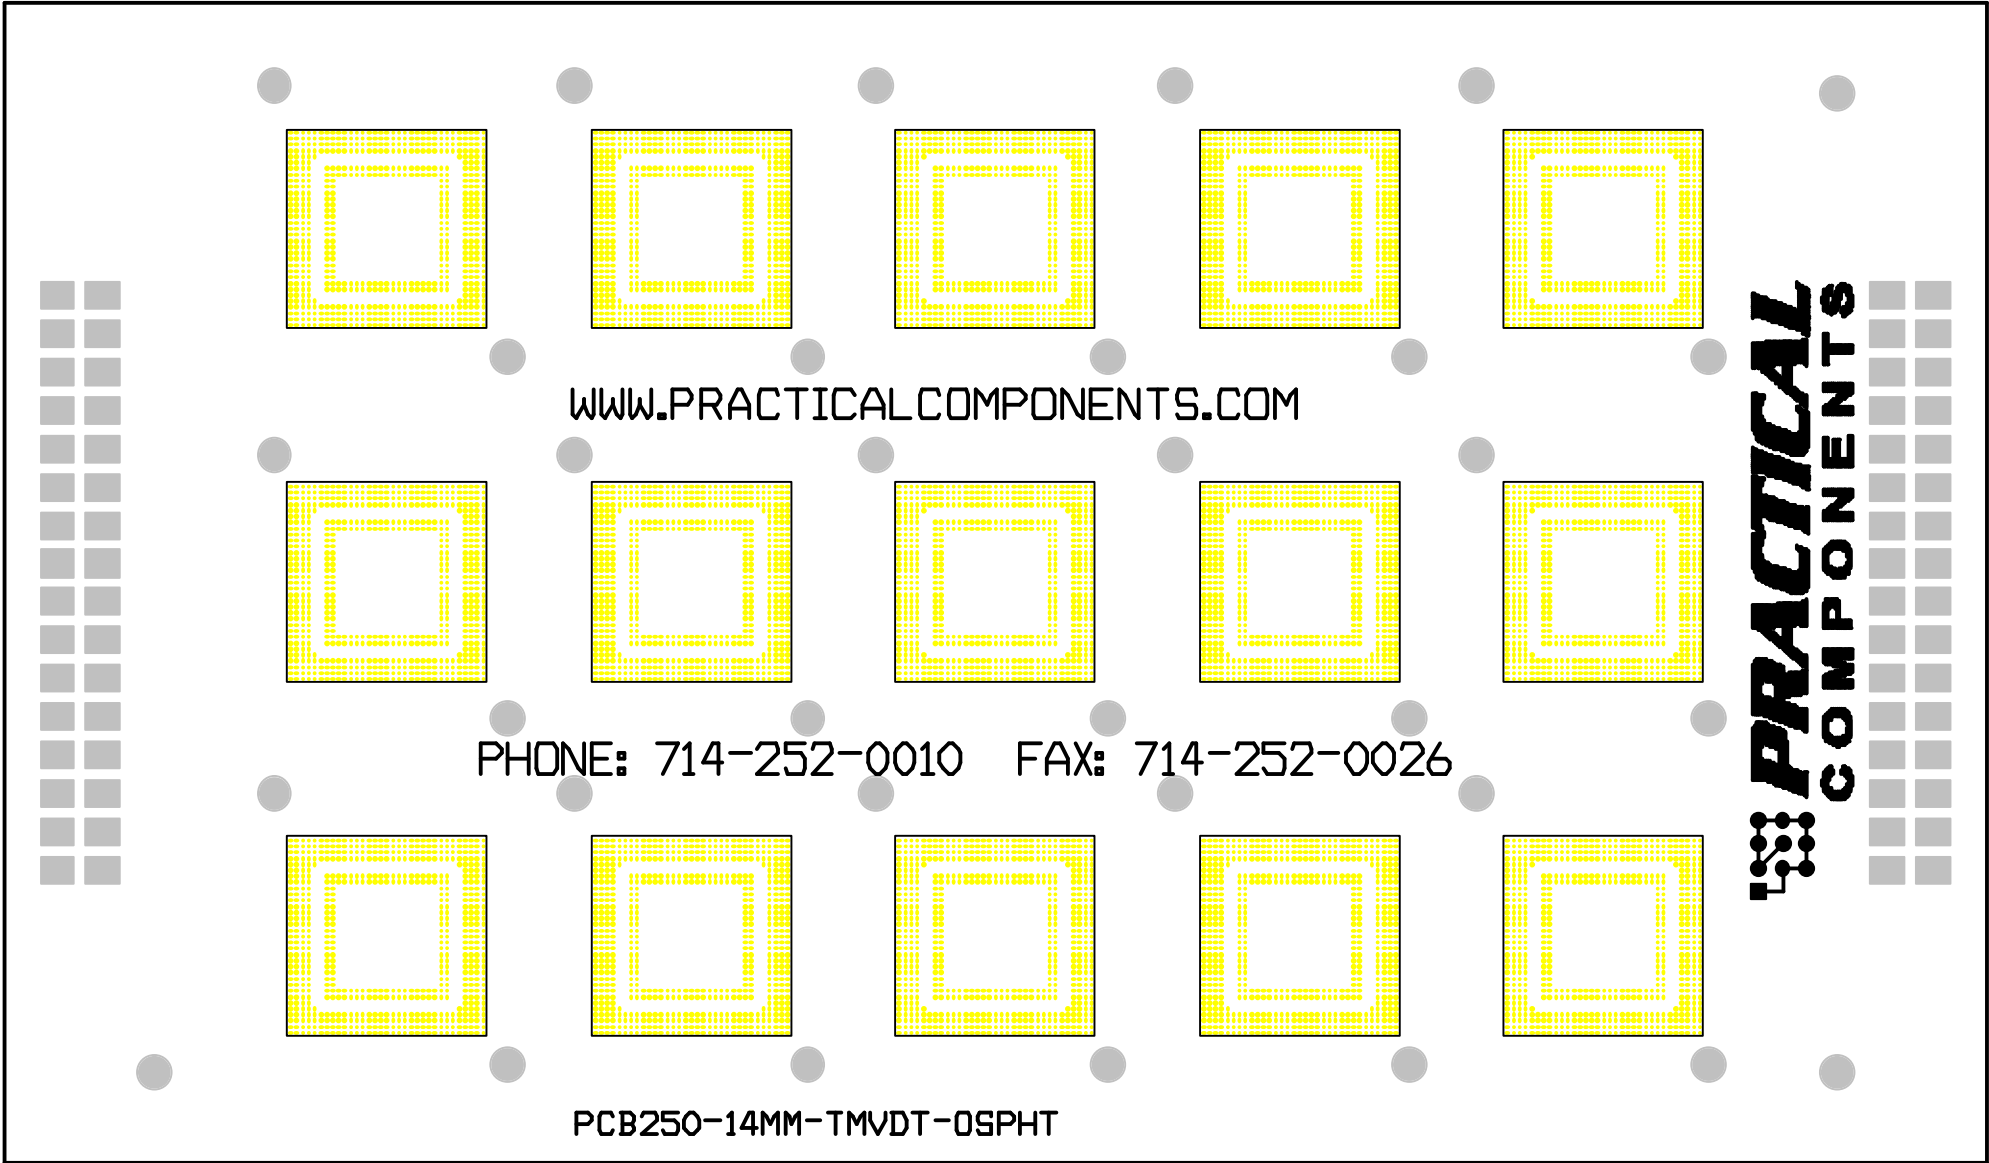

**THIS IS A STATIC SENSITIVE ASSEMBLY.
TAKE ALL NECESSARY PRECAUTIONS DURING HANDLING.**

Customer:	Practical Components
Assembly Number:	PCB 250-14mm TMV
Assembly Name:	
Assembly Revision:	2011-03-04
Description of Change:	
Last Modified:	3/8/2011
Modified by:	bmiklosey



Process Point:
Array Packages

