


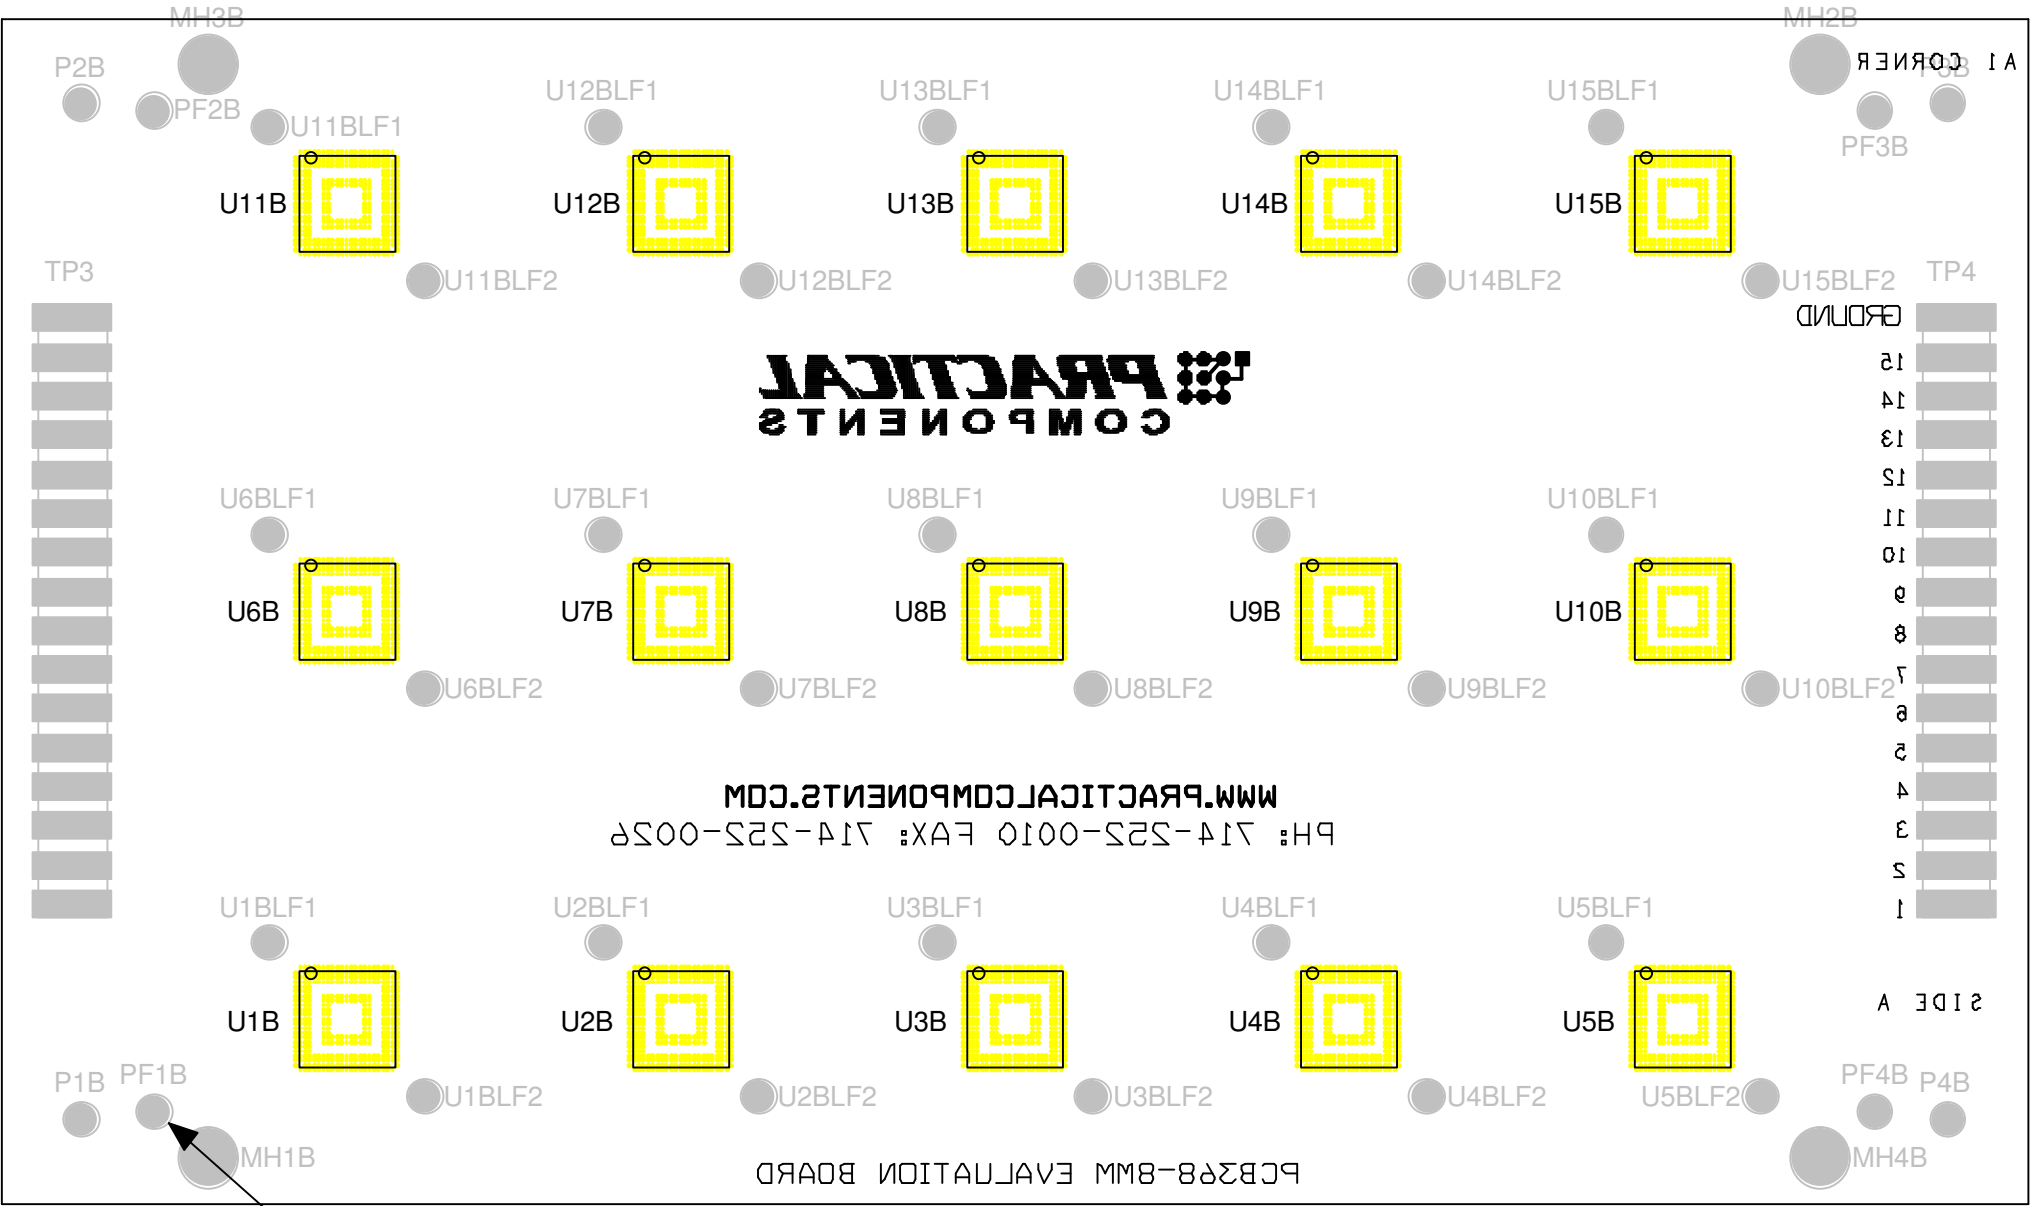


Origin

	Practical Part Number	Order #	Ref	Qty
	A-CVBGA368-.3mm-8mm-DC-LF	31610	U1B, U2B, U3B, U4B, U5B, U6B, U7B, U8B, U9B, U10B, U11B, U12B, U13B, U14B, U15B	15

THIS IS A STATIC SENSITIVE ASSEMBLY.
TAKE ALL NECESSARY PRECAUTIONS DURING HANDLING.

Customer:	Practical Components
Assembly Number:	PCB 368 8MM Evaluation Bd
Assembly Name:	
Assembly Revision:	2012-01-06
Description of Change:	
Last Modified:	1/9/2012
Modified by:	bmiklosey
CIRCUITCAM™ POWERED BY AEGIS Process Point: Bot - ALL	

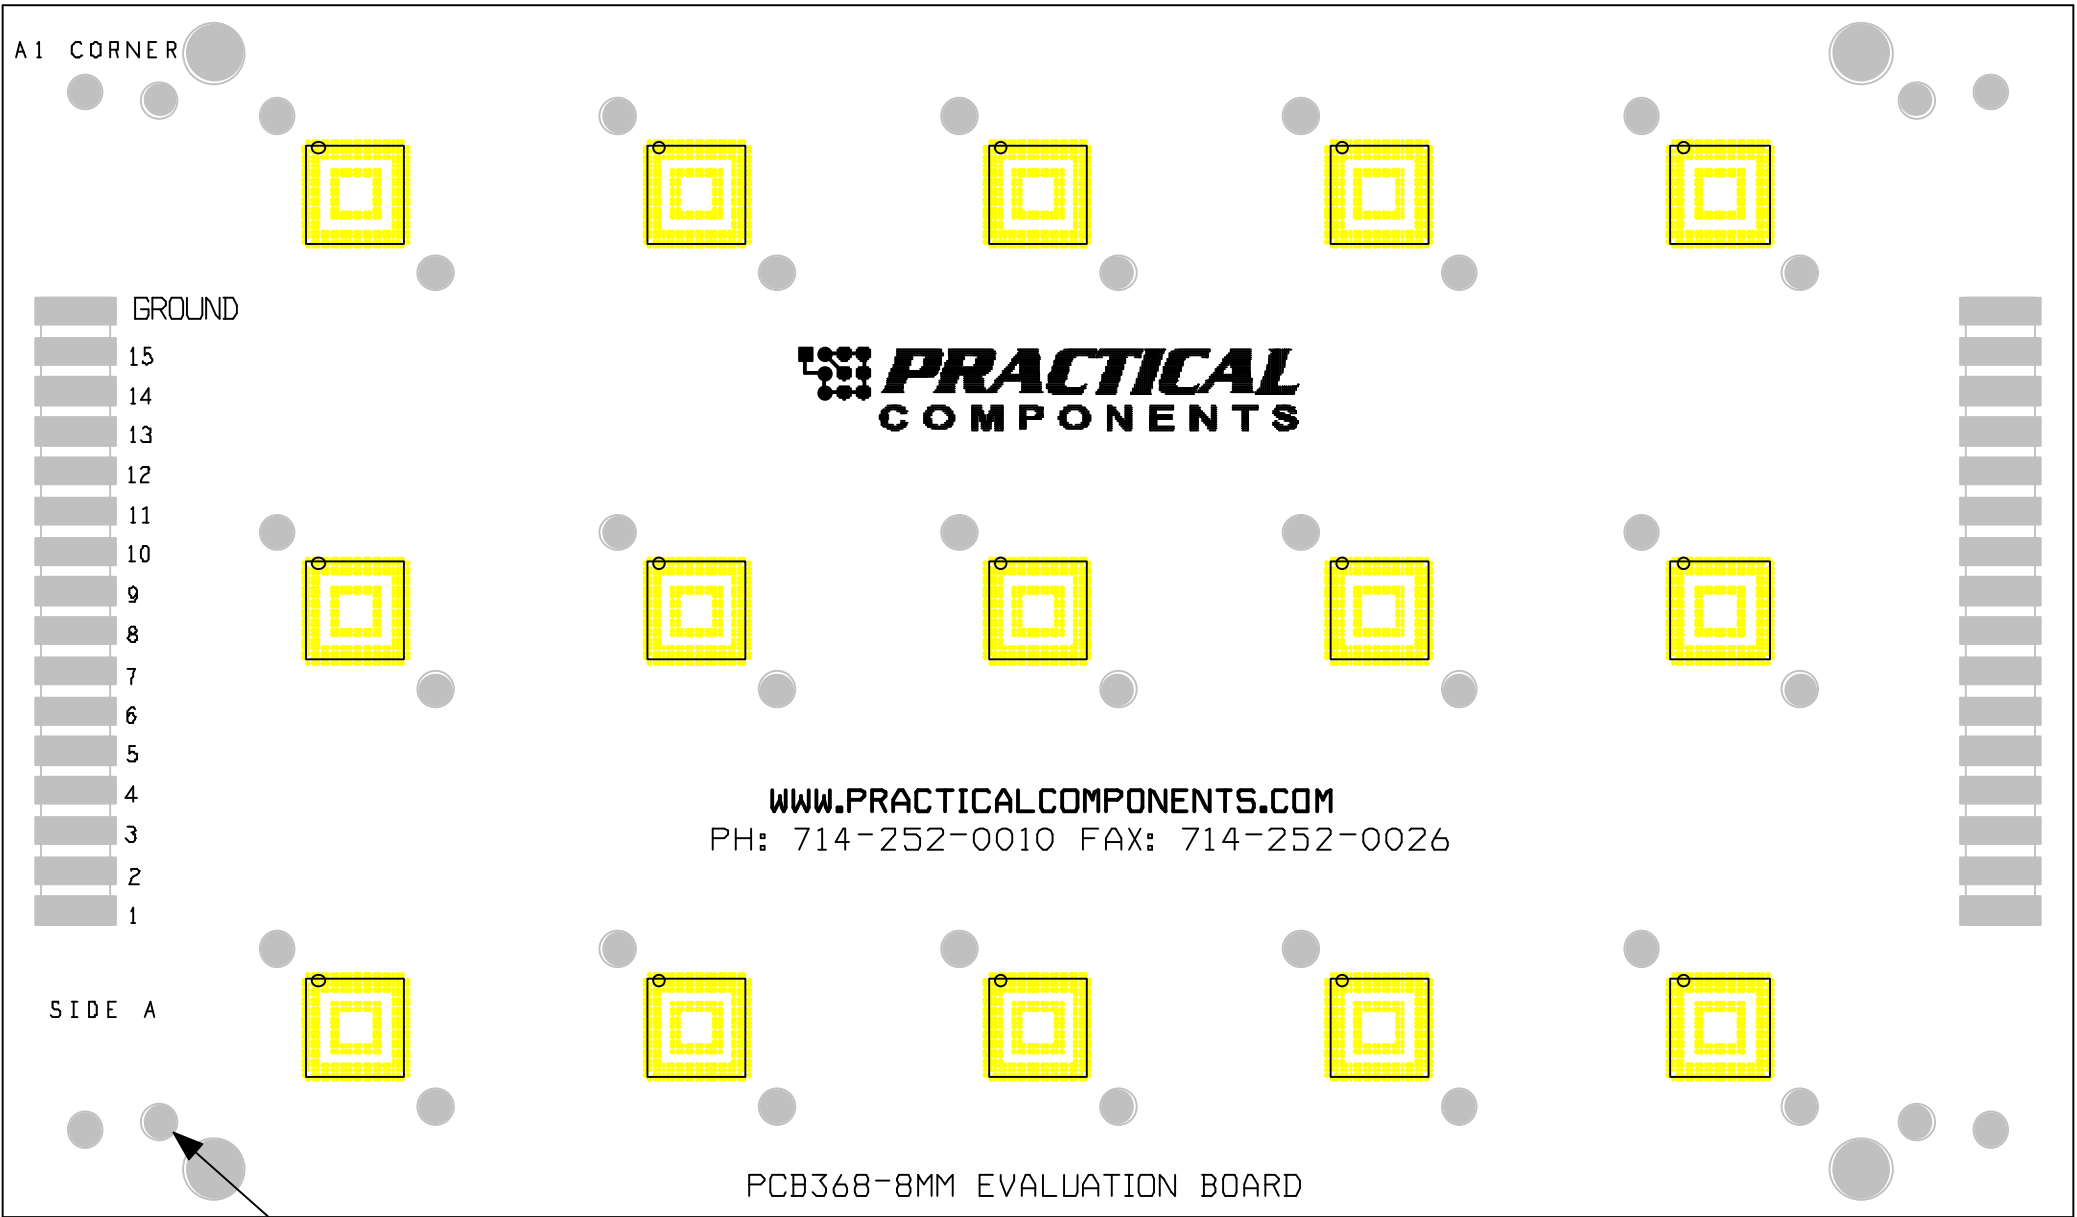


Origin

	Practical Part Number	Order #	Ref	Qty
	A-CVBGA368-.3mm-8mm-DC-LF	31610	U1A, U2A, U3A, U4A, U5A, U6A, U7A, U8A, U9A, U10A, U11A, U12A, U13A, U14A, U15A	15


THIS IS A STATIC SENSITIVE ASSEMBLY.
TAKE ALL NECESSARY PRECAUTIONS DURING HANDLING.

Customer:	Practical Components
Assembly Number:	PCB 368 8MM Evaluation Bd
Assembly Name:	
Assembly Revision:	2012-01-06
Description of Change:	
Last Modified:	1/9/2012
Modified by:	bmiklosey
 CIRCUITCAM™ POWERED BY AEGIS	Process Point: Top - SMT

Top Side

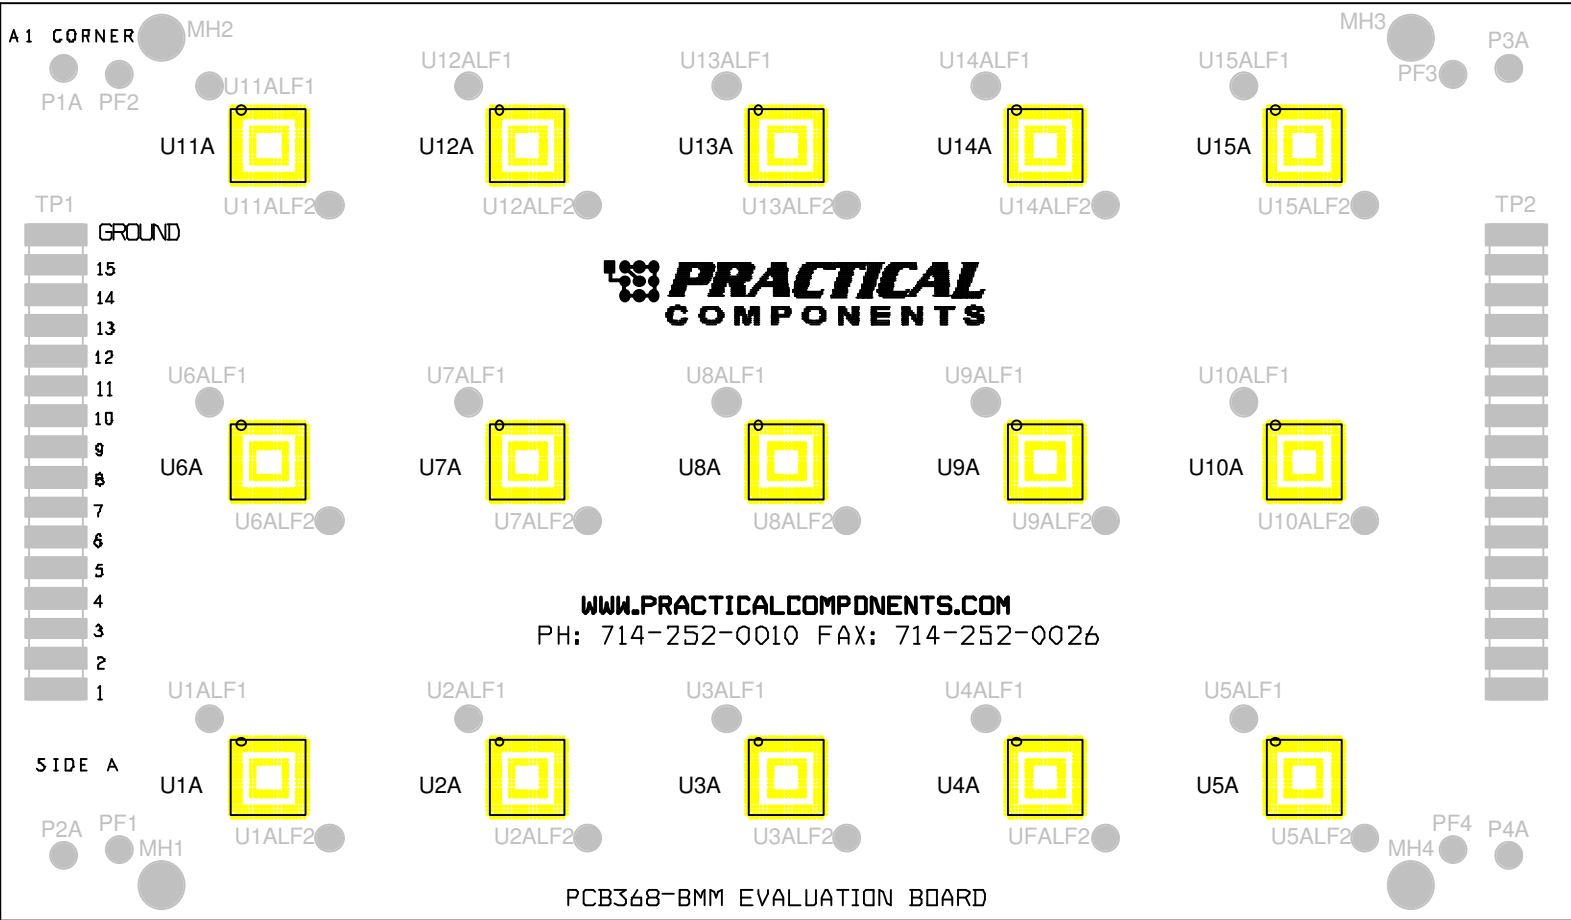

Bottom Side

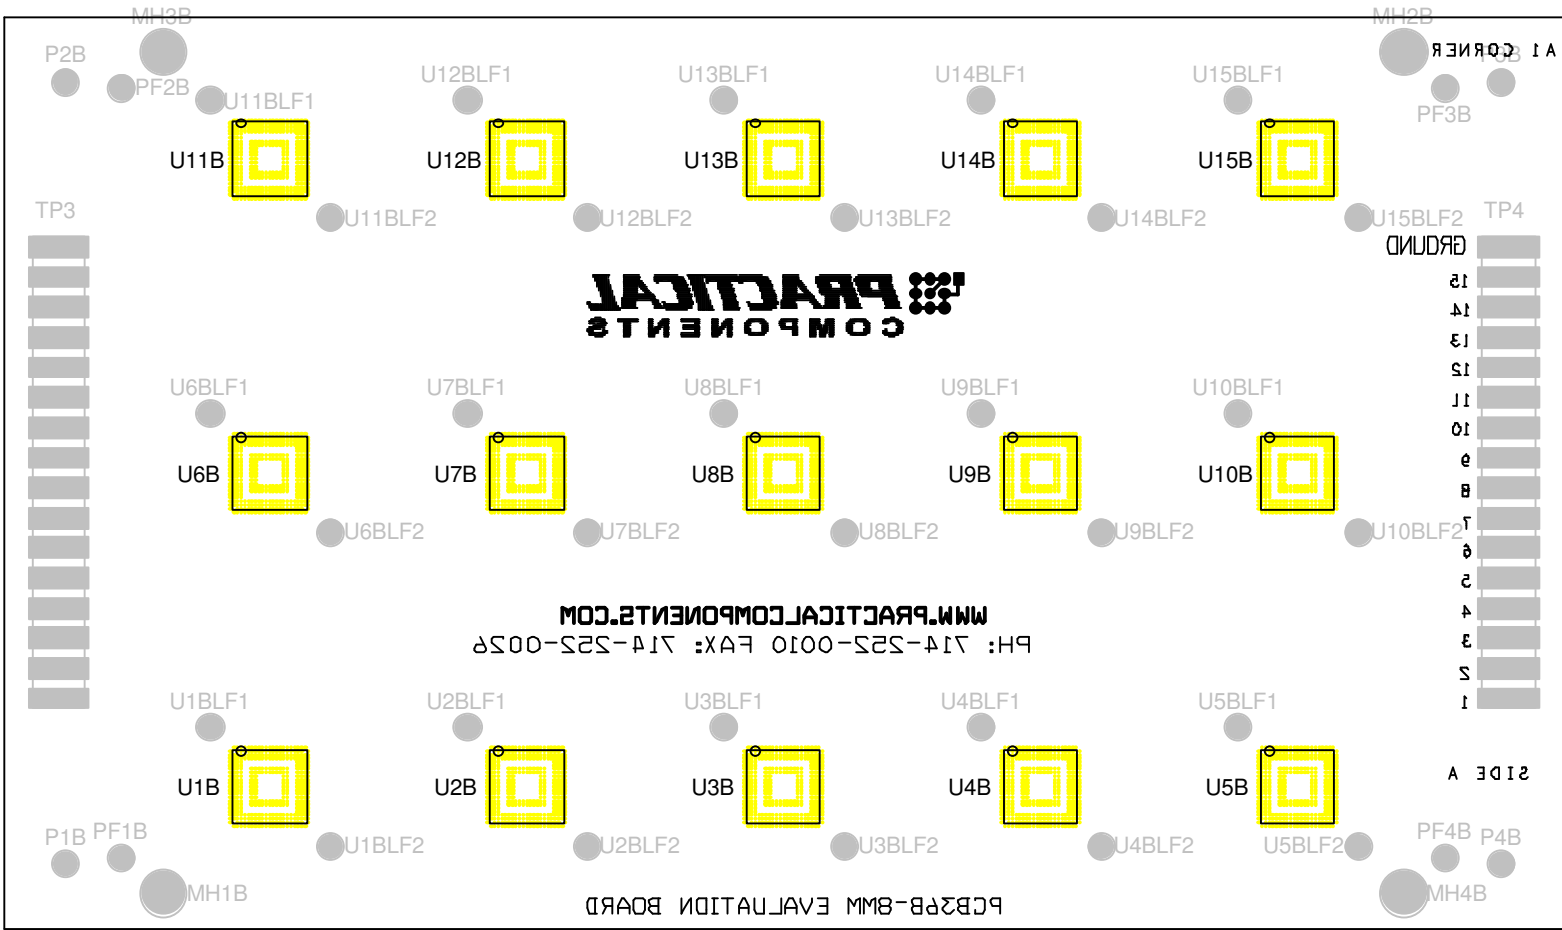

THIS IS A STATIC SENSITIVE ASSEMBLY.
TAKE ALL NECESSARY PRECAUTIONS DURING HANDLING.

	Practical Part Number	Order #	Ref	Qty
	A-CVBGA368-.3mm-8mm-DC-LF	31610	U1A-U1B, U2A-U2B, U3A-U3B, U4A-U4B, U5A-U5B, U6A-U6B, U7A-U7B, U8A-U8B, U9A-U9B, U10A-U10B, U11A-U11B, U12A-U12B, U13A-U13B, U14A-U14B, U15A-U15B	30

Customer:	Practical Components
Assembly Number:	PCB 368 8MM Evaluation Bd
Assembly Name:	
Assembly Revision:	2012-01-06
Description of Change:	
Last Modified:	1/9/2012
Modified by:	bmiklosey
CIRCUITCAM™ POWERED BY AEGIS Process Point: Array Packages	